

How to set fan speed on SKY-8201

V1.0

Initiated by	Darryl Hsu	Job Title	Tech Support Engineer	Signature	
Release Status	V1.0			Release Date	2018/10/31

Version

Version	Date	Editor	Comment
V1.0	2018/10/31	Darryl Hsu	First released version

Contents

Version 2

Purpose 4

Applicable model list..... 4

Description 4

Procedures 4

Purpose

This guide is to provide a simple step-by-step guidance for users to follow on How to set fan speed on SKY-8201.

Applicable model list

SKY-8201

Description

The fan speed of default is controlled by BMC smart fan function. If user needs increase/decrease fan speed manually, user can follow procedures to set fan level.

Procedures

- a. Set Fan Level command

```
ipmitool raw 0x2c 0x15 0x00 0x00 <FAN_LEVEL>  
ex. ipmitool raw 0x2c 0x15 0x00 0x00 50 (50% duty)
```

- b. Set Fan Level back to default command

```
ipmitool raw 0x2c 0x15 0x00 0x00 0xff
```