


# Serial Console Cable PIN Configuration

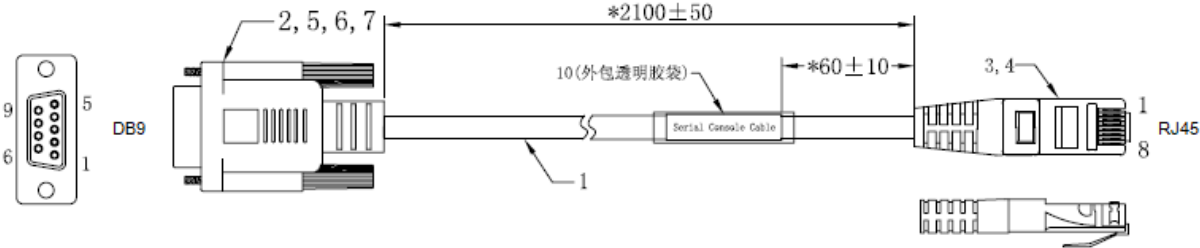

1. Connect RJ45's PIN 3 to PIN 2 on DB9 connector.
2. Short RJ45's PIN 4&5 and connect to PIN 5 on DB9.
3. Connect RJ45's PIN 6 to PIN 3 on DB9 connector.

Assignment		
DB9		RJ45
8	no connection	1
6	no connection	2
2		3
5		4
		5
3		6
4	no connection	7
7	no connection	8