



1. Put the attach files into USB and plug in FWA-1112 USB port, then reset.
2. Please login BIOS and choose "UEFI: Built-in EFI Shell" in Override.

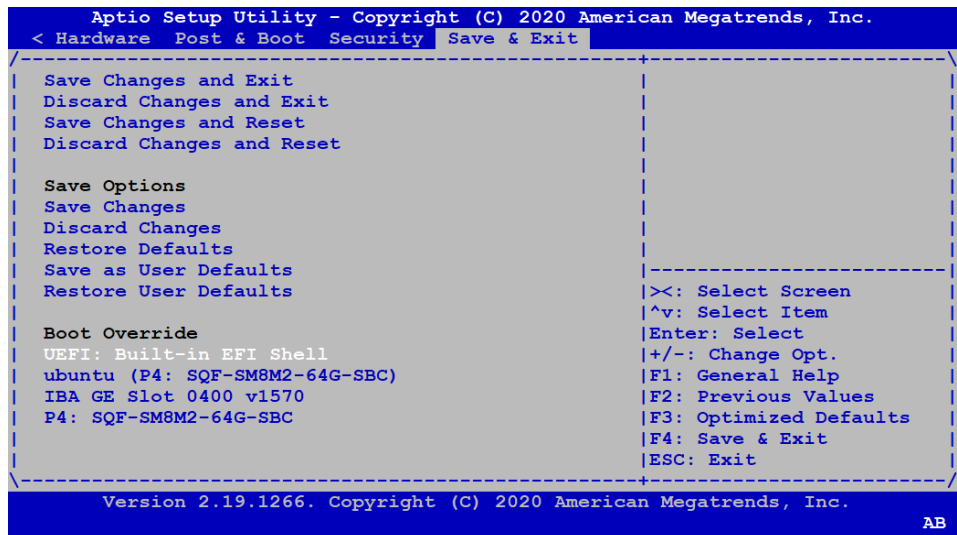


3. Switch to UEFI Interactive Shell mode.



4. Identify the usb location and put the correct name , here is fs1 (means USB flash)

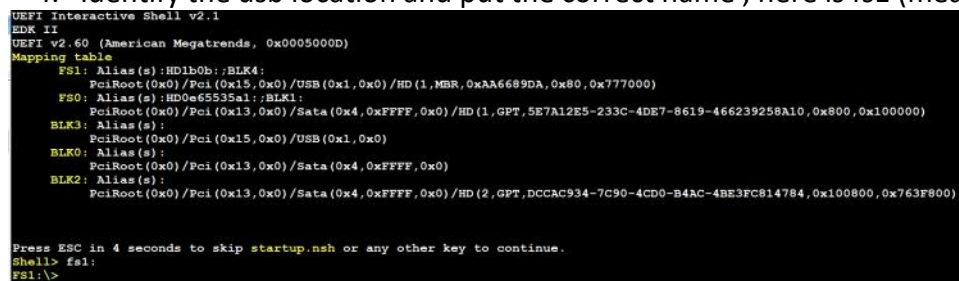

5. Check the content of USB

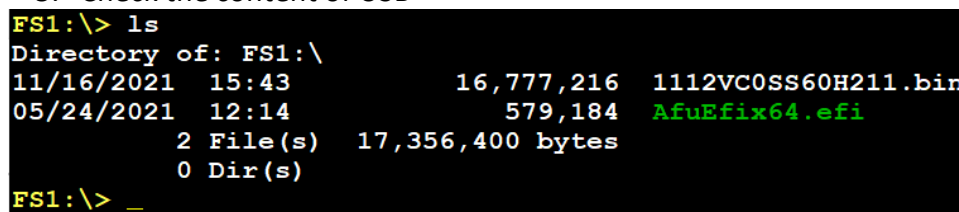

6. Execute command, check last message "Process completed".

```

FS1:\> AfuEfix64.efi 1112VC0SS60H211.bin /P /B /N /X
-----
                AMI Firmware Update Utility v5.14.03.0039
                Copyright (c) 1985-2021, American Megatrends International LLC.
                All rights reserved. Subject to AMI licensing agreement.
-----
Reading flash ..... Done
- ME Data Size Checking ..... Pass
- FFS Checksums ..... Pass
- Check RomLayout ..... Pass
Erasing Main Block ..... Done
Updating Main Block ..... Done
Verifying Main Block ..... Done
Erasing Boot Block ..... Done
Updating Boot Block ..... Done
Verifying Boot Block ..... Done
Erasing NVRAM Block ..... Done
Updating NVRAM Block ..... Done
FS1:\> ing NVRAM Block ..... Done

Process completed.

```

- 7. Power off then Power on after 5 secs, and it will take 1 min around to boot in the first time.
- 8. Evaluate message info show up.

```

Version 2.19.1266. Copyright (C) 2021 American Megatrends, Inc.
**** FWA-1112VC BIOS H2.11 (11/16/2021) ****
Press <DEL> or <F2> to enter setup.

"Evaluation ROM only, not for sale."

```

- 9. The option can be checked and "Disabled" by default.

```

Aptio Setup Utility - Copyright (C) 2021 American Megatrends, Inc.
Main Platform Hardware Post & Boot Security Save & Exit
-----
> Serial Console
> USB Configuration
> Trusted Computing
> Hardware Monitor
> Virtualization
> Platform Management
-----
Virtualization
-----
><: Select Screen
^v: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F3: Optimized Defaults
F4: Save & Exit
ESC: Exit
-----
Version 2.19.1266. Copyright (C) 2021 American Megatrends, Inc.
AB

```

```

Aptio Setup Utility - Copyright (C) 2021 American Megatrends, Inc.
Platform
-----
Intel Virtualization [Enabled]
VT-d [Enabled]
VT-d Interrupt remapp [Disabled]
SR-IOV Support [Disabled]
-----
Option to
Enable/Disable VT-d
Interrupt remapping
-----
><: Select Screen
^v: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F3: Optimized Defaults
F4: Save & Exit
ESC: Exit
-----
Version 2.19.1266. Copyright (C) 2021 American Megatrends, Inc.
AB

```