

MIC-5345D

FMM Installation


V1.0

Initialed by	Justin.Yang	Job title	TSE
Release status	V1.0	Release date	2018-11-15


Safety Precaution: Please wear ESD safe clothing and perform the following tasks on ESD pad

1. Unscrew the 4 screws on the MO-297 carrier board as following figure

(MIC-5345CD2-P0E 的板卡在存储小板的位置会看到 MO297 载板如下图)

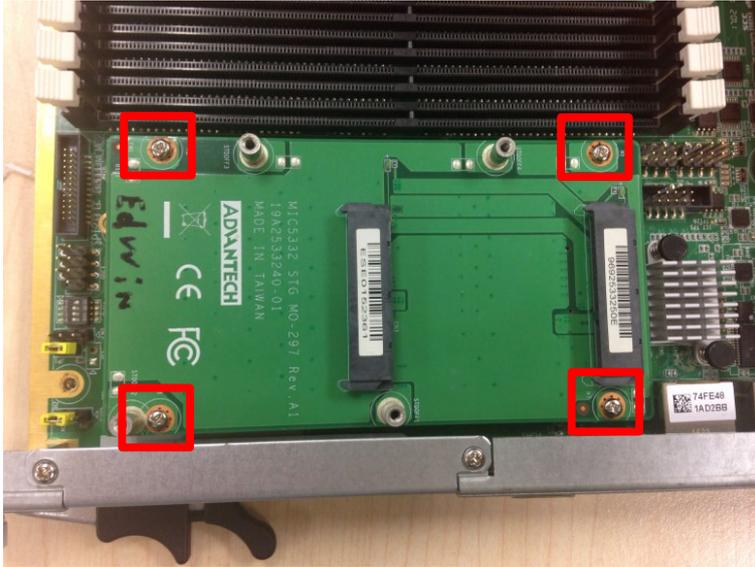


2. Remove 3 copper pillars as following red marked (卸除上图黄框的四颗螺丝，会看到铜柱如下图)

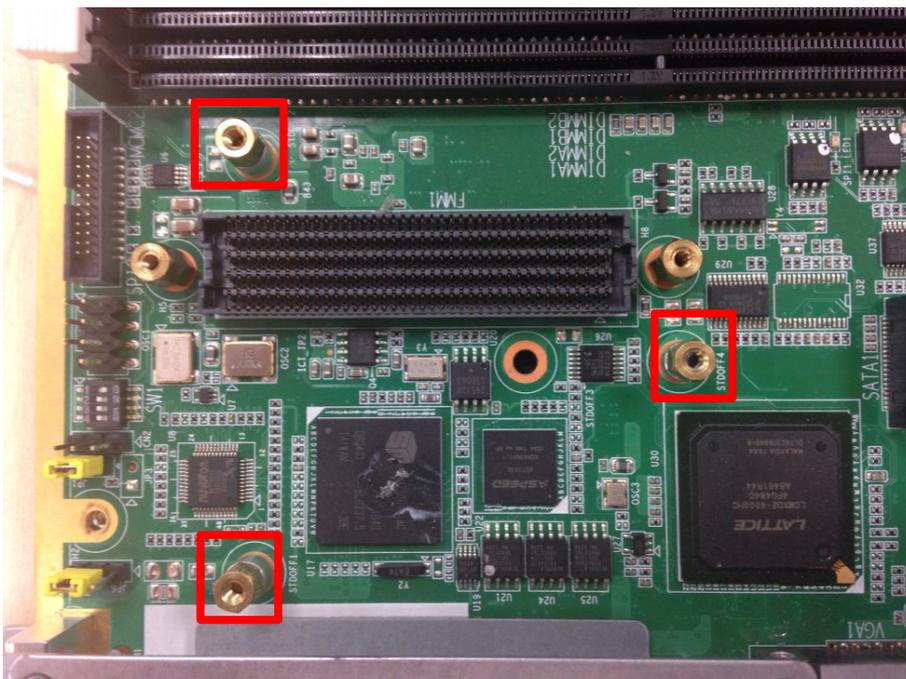

Note: Those 3 copper pillars must be removed before install FMM or FMM may get electrical damaged. (请注意上图红框处三个铜柱一定要移除，否则配合 FMM 使用时会有短路烧毁板卡的风险)

- 3. Put M.2 carrier module as below (移除后板卡如下图，安装 M.2 小板：9692534570E 于原来板对板接口处。)

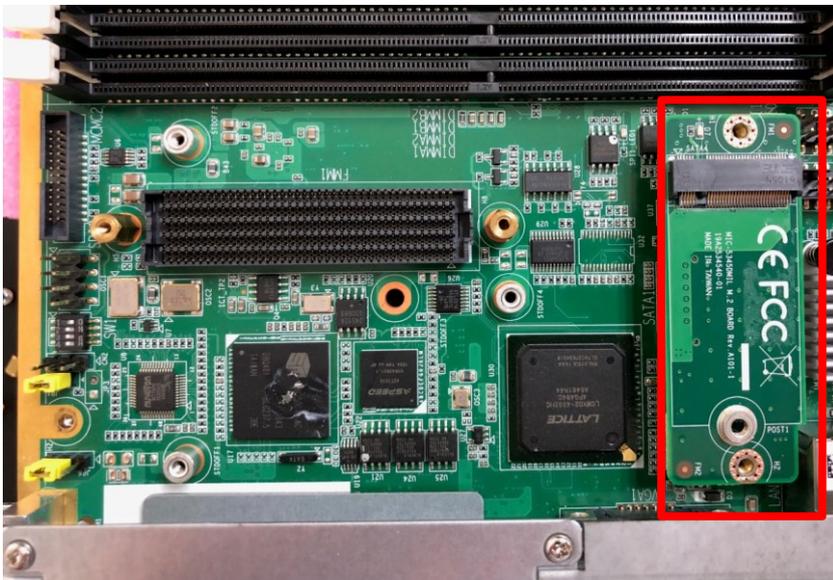

- 4. Screw 2 screws on M.2 carrier board (锁上螺丝，锁固后如下)



5. Remove FMM front panel, then you can install FMM(移除前挡板即可装上 FMM 模块)

